

## **TECHNICAL INSTRUCTIONS**

## FINNED BULB CONVERSION KIT For #11 Regulators


Kit numbers 701-549 and 701-550 are available to field convert, respectively, 1x9" and 1x 20" Style "D" (pipe line) bulbs to Style "G" (finned, airstream) bulbs. Style "G" bulbs are not factory assembled.

Kit No. 701-549 (1x9" bulb) and 701-550 (1x20" bulb) consist of:

Mounting Flange	709-164
Clamp	141-789
Copper Fin (40 for 9" bulb, 70 for 20" bulb)	701-330

To assemble:

- 1. Remove tank fitting from "D" bulb.
- 2. Slide flange over bulb and thread onto retaining nut. Tighten.
- Push fins onto bulb, singly, with tabs facing tip of bulb. First fin should be pushed tight against the flange.
- Before installing last fin, loosely place clamp over tabs of previous fin. Tighten clamp with screwdriver.
  Then place last fin on bulb with its tabs toward the flange.
- 5. Discard any extra fins...extras may have been furnished to compensate for bulb length variations.

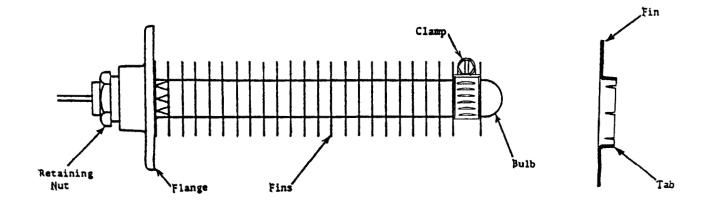

## **CALIFORNIA PROPOSITION 65 WARNING**

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (Installer: California law requires that this warning be given to the consumer.)

For more information: www.wattsind.com/prop65



© 2003 Powers, a Watts Industries Co.